


Contempra Folding Doors

Before You Start

For quick and easy installation of your Contempra folding door, read these instructions thoroughly. A few minutes of prior planning will make the job easier and ensure years of trouble-free use.

The Tools You Will Need

- Small #1 Phillips type screwdriver,
- a tape measure,
- a small nail,
- a sharp punch,
- a 3/32" drill for screw pilot-holes,
- and a hacksaw or fine tooth saw (saw needed only if door opening is less than 80" high)

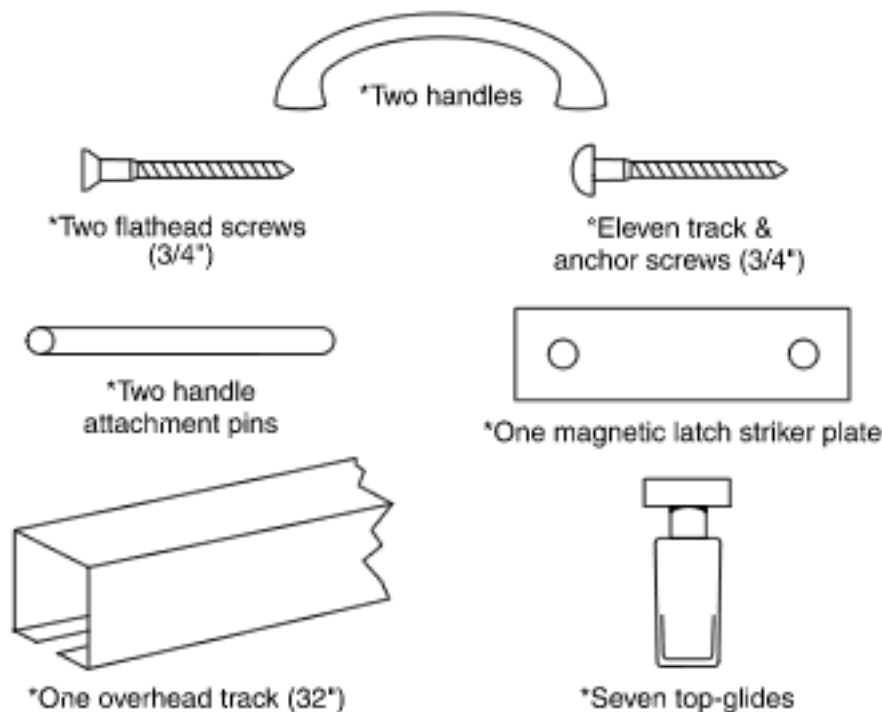

Contempra Folding Doors

SECTION 1


Step 1 - Measure the Door Opening

If the height of your door opening is approximately 80", you will not need to alter the door itself. If the opening is less than 80" high, the door may be shortened by sawing off the bottom of the door panels. If the opening is less than 80" high: Stack the door panels together and cut excess with a hacksaw or fine tooth saw. Cut the overhead track 1/8" shorter than the width of the opening. See figure 1.



Step 2 - Install the Overhead Track

Position the Contempra overhead track on the top of the door opening so that it is straight and centered. After making a screw pilot-hole (with a nail or 3/32" drill), drive a 3/4" track screw through the screw hole nearest the center of the track. Do not tighten. (Tape may be used to hold the track in place while you mark and drill.) See figure 2.

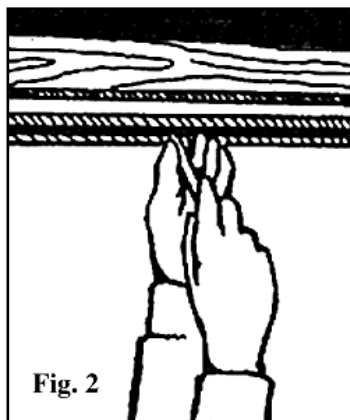


Contempra Folding Doors

SECTION 1 (continued)


Step 3 - Install the Handles

Tap the two Contempra handle attachment pins into one handle, then fit the pins through the door panel holes. Press the other handle onto the pins. If necessary, you may back one handle with a solid object and tap the other handle alternately over each pin area until the handles are seated. Do not strike the middle of either handle. See figure 3.

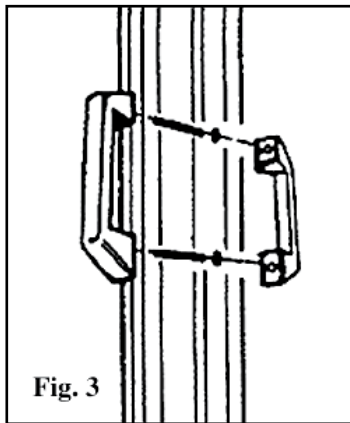

Step 4 - Install the Top-Glides

Position top-glides over center holes on top of each full-width panel. Snap top-glides into place and make sure they are secure.

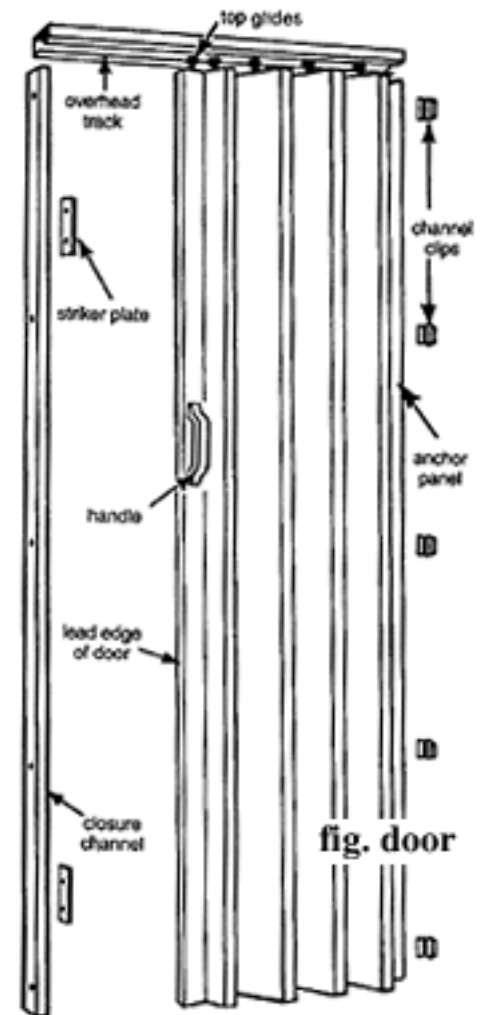

This is a representative drawing.


© 1994 LTL Home Products, Inc.

Contempra Folding Doors

SECTION 1 (continued)


Step 5 - Install the Contempra Door

Apply track lubricant to each top glide. Swing one end of the overhead track out of the door opening to accept the top glides. Decide if you want the door to open from the left or right, then slide all top glides into the track. Stack the panels together near the center screw. See figure 4.

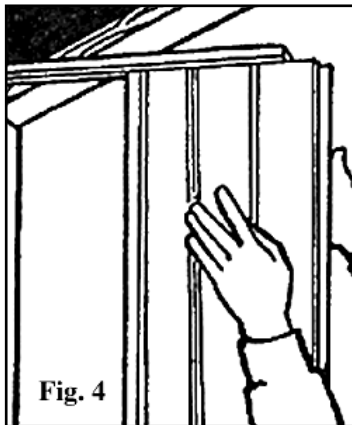

Step 6 - Secure the Overhead Track

Swing the track back to its original position. After making screw pilot-holes (with a nail or a 3/32" drill), drive the 3/4" track screws through all track holes. Set all screws as straight and tight as possible to assure smooth operation of the door. See figure 5.

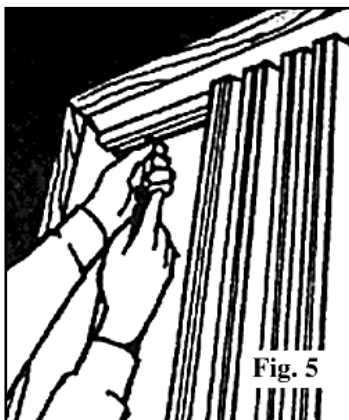


Contempra Folding Doors

SECTION 1 (continued)


Step 7 - Secure the Anchor Panel

Slide the entire door against the non-opening side of the doorway. With the door panel hanging naturally, locate the six holes on the anchor panel where the door will be secured to the jamb. Insert screws and secure the end panel to the jamb. See figure 6.

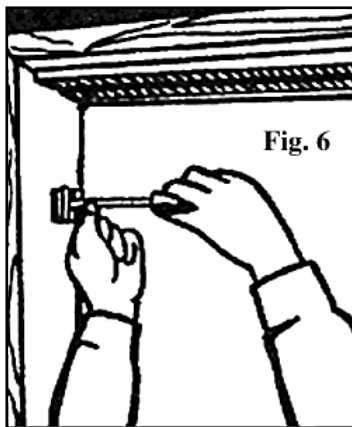

Step 8 - Install the Magnetic Latch Striker Plate

Place the magnetic latch striker plate against the metal strips in the door edge. Close the door until it strikes the door jamb. Mark the proper location of the latch. Affix the latch to the door jamb with 3/4" flathead screws. See figure 7.

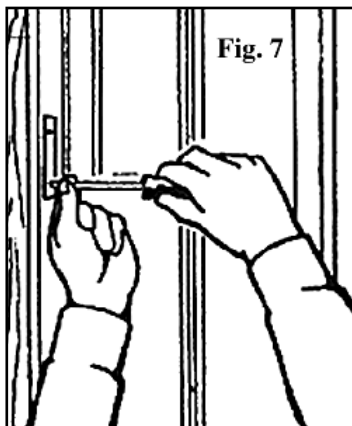

Contempra Folding Doors

SECTION 2 - Instructions for Contempra Double Door Installation

For openings wider than 32" and less than 64", two doors may be used in pairs.

Step 1 - Measure the Door Opening

Follow single door installation steps 3 through 6. Note on heavier double door installation additional holes and track screws may be required in order to make the track more secure. Add screws as required. See figure door.

Step 2 - Install One Overhead Track


Follow single door installation steps 3 through 6. Note on heavier double door installation additional holes and track screws may be required in order to make the track more secure. Add screws as required. See figure door.

Step 3 - Install the Contempra Door

Follow single door installation steps 3 through 6. Note on heavier double door installation additional holes and track screws may be required in order to make the track more secure. Add screws as required. See figure door.

Step 4 - Complete the Installation

Follow single door installation steps 3 through 6. Note on heavier double door installation additional holes and track screws may be required in order to make the track more secure. Add screws as required. See figure door.

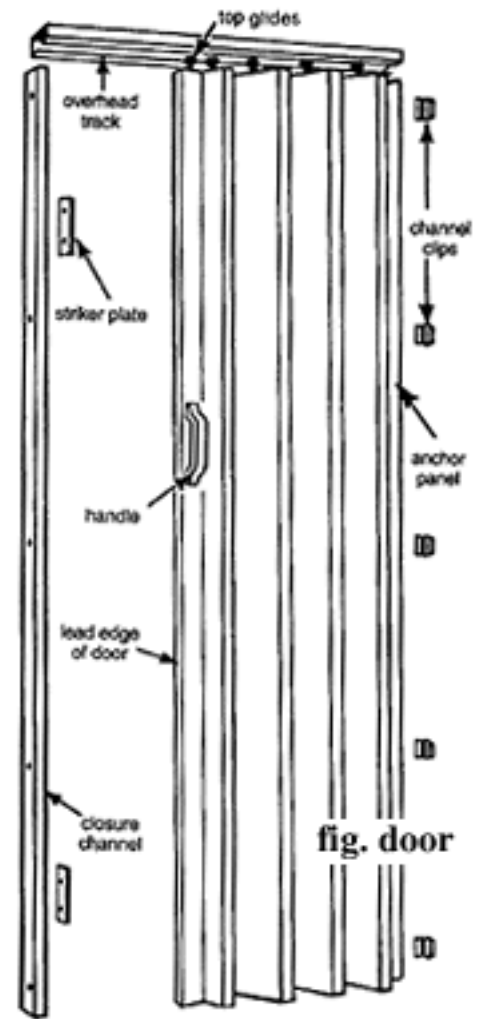

This is a representative drawing.

© 1994 LTL Home Products, Inc.